

## Assembly & Installation Guidelines

### Walk-In Wardrobe — Galleria 12.0

Please read these guidelines carefully before installing and using the product.

#### SAFETY INFORMATION

- Always wear appropriate safety equipment.
- This product requires two people for installation.
- If this product falls down, serious or fatal crushing injuries can occur. This product should be permanently fixed to the wall – contact your local fastening device retailer for advice on what fastening devices are suitable for your walls.
- Assembly should be carried out by an appropriately skilled person, due to the risk of wrongful assembly leading to injury or damage.





# Assembly & Installation Guidelines

## Walk-in Wardrobe — Galleria 12.0

### ITEMS INCLUDED IN THE BOX

#### TOWER SHELL BOX

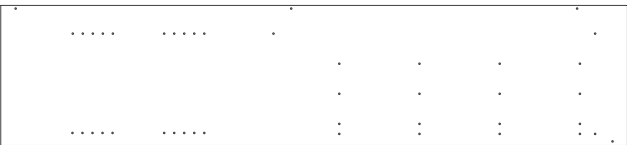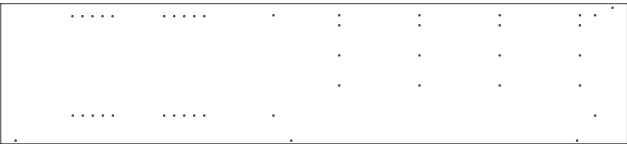

2 x drawer tower sides  
2000 mm W x 447 mm H x 16 mm D



1 x shelf nailer  
575 mm W x 95 mm H  
x 16 mm D



1 x front toe  
575 mm W x 95 mm H  
x 16 mm D



2 x nailers  
575 mm W x 95 mm H  
x 16 mm D



1 x deck  
575 mm W x 447 mm H  
x 16 mm D



1 x fixed shelf  
575 mm W x 447 mm H  
x 16 mm D



16 x cams  
20 mm diameter



16 x cam bolts  
16 mm H x 6 mm diameter



16 x adjustable shelf pins  
10 mm W x 14 mm H x 13 mm D

#### TOP SHELF BOX



1 x top shelf



1 x back cleat



1 x hanging rail



2 x side cleats  
425 mm W x 95 mm H  
x 16 mm D



Fast caps (white dots)  
14 mm diameter



8 x hanging rail screws  
16 mm H x 6 mm diameter



4 x hanging rail brackets  
45 mm H

#### ADJUSTABLE SHELVES BOX



2 x adjustable shelves  
575 mm W x 447 mm H x 16 mm D

#### DIVIDER BOX




1 x divider  
2000 mm W x 300 mm H x 16 mm D

1 x hanging rail  
1200 mm W x 35 mm diameter




4 x hanging rail brackets  
45 mm H


## DRAWER RUNNERS BOX

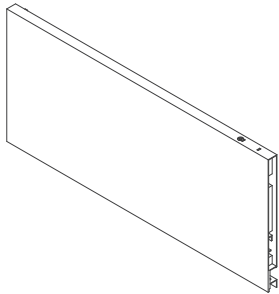


4 x drawer side (left)

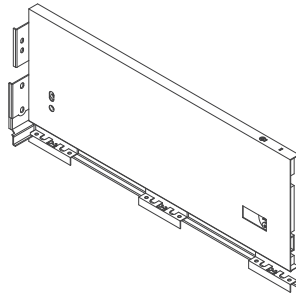


4 x drawer side (right)



4 x Drawer Front Fixing Bracket

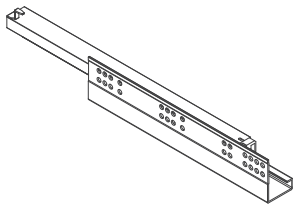

4 x drawer runner (left)

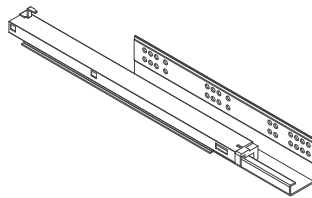

4 x drawer runner (right)



4 x drawer side cover cap (bottom)



4 x drawer side cover cap (top)



drawer screw #1  
6G x 16 mm CSK



drawer screw #4  
6G x 10 mm CSK



34 x Euro screw



4 x back fixing bracket (left)



4 x back fixing bracket (right)

## BACK, BASES AND FRONT BOX



4 x drawer bases




4 x drawer backs



4 x drawer fronts

## HANDLES BOX

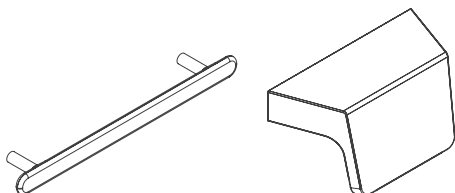

4 x drawer handles



4 x drawer handle bolts  
47 mm H x 5 mm diameter

## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0

#### EXTRA ITEMS AND TOOLS REQUIRED CHECKLIST

These items are readily available from all major hardware stores.

Drill and No.2 Phillips head driver	<input type="checkbox"/>	Builder's square	<input type="checkbox"/>
Multi tool	<input type="checkbox"/>	Countersink drill bit	<input type="checkbox"/>
Stepladder	<input type="checkbox"/>	Hammer	<input type="checkbox"/>
Phillips head screwdriver	<input type="checkbox"/>	Liquid Nails	<input type="checkbox"/>
Spirit level	<input type="checkbox"/>	Gapping	<input type="checkbox"/>
Measuring tape and pencil	<input type="checkbox"/>	Packers	<input type="checkbox"/>
Circular saw	<input type="checkbox"/>	6-gauge 40 mm screws	<input type="checkbox"/>
Silicone/caulking gun	<input type="checkbox"/>	6-gauge 13 mm screws	<input type="checkbox"/>
Stud finder	<input type="checkbox"/>	6-gauge 28 mm screws	<input type="checkbox"/>
3 mm drill bits	<input type="checkbox"/>	Wallmates	<input type="checkbox"/>

#### IMPORTANT BUILDING TERMINOLOGY


In construction, tradespeople use terms like 'square', 'level' and 'plumb' to be sure that their measurements are accurate, and the finished project is successful. Here are some definitions of common building terminologies.

- Square:** when corners are 90 degrees.
- Level:** straight from side to side, like a shelf that's been properly installed.
- Plumb:** straight up and down, like the walls of a building.
- Flush:** when two adjoining surfaces are perfectly flat next to each other.
- Skirting:** a board that runs along the border between the interior wall and the floor.
- Architrave:** is used to frame windows and openings to conceal any shrinkage or movement that may occur between the wall and the casing within the door surround.
- Jamb:** is a flat surface that runs vertically on each side of the door frame.
- Scribe:** cutting away the waste material that is preventing two materials from meeting together perfectly.

#### IMPORTANT INFORMATION

- Pre-drill board and countersink before fixing to walls.
- Read guidelines carefully before commencing.


## Step 1

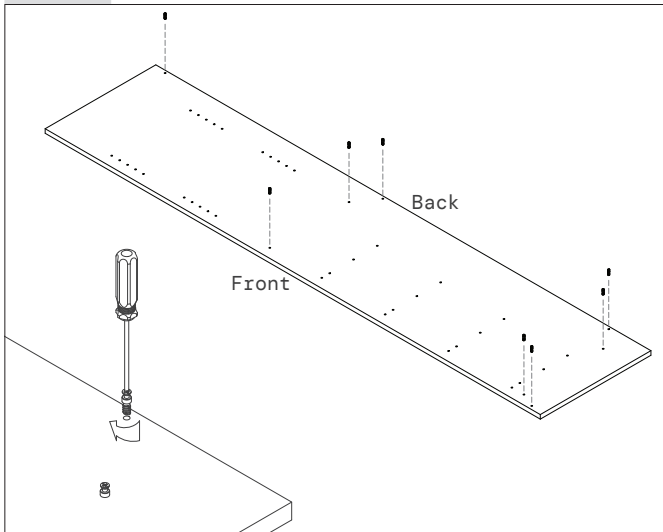

Open tower shell box.

Screw in cam bolts (both sides).

## Step 2

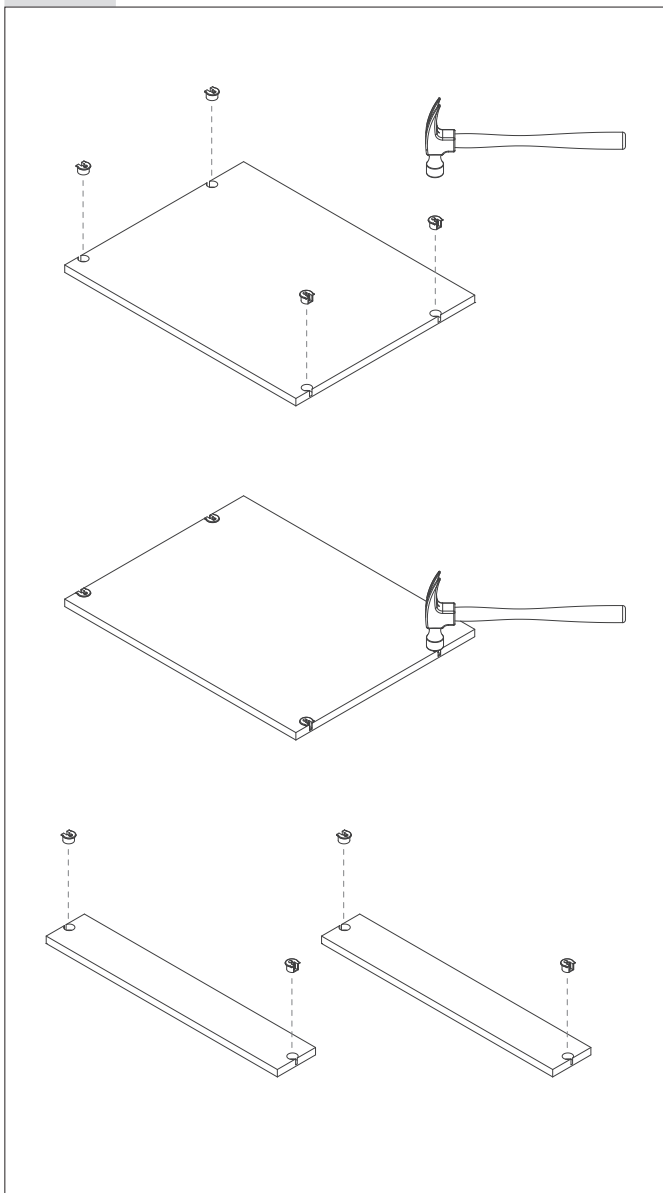


Hammer in cams into nailers, shelf nailer, front toe, deck and fixed shelf

## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0

### Step 3

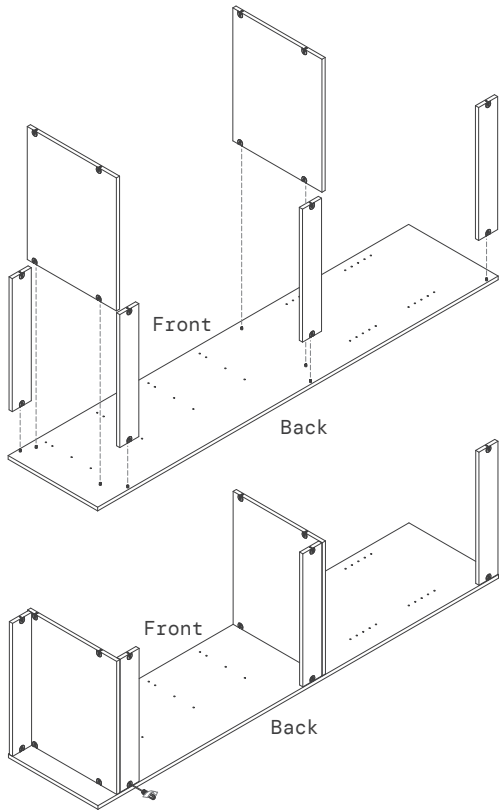


Place nailers over cam bolts and tighten.

Place deck over cam bolts and tighten.

Place fixed shelf over cam bolts and tighten.

### Step 4


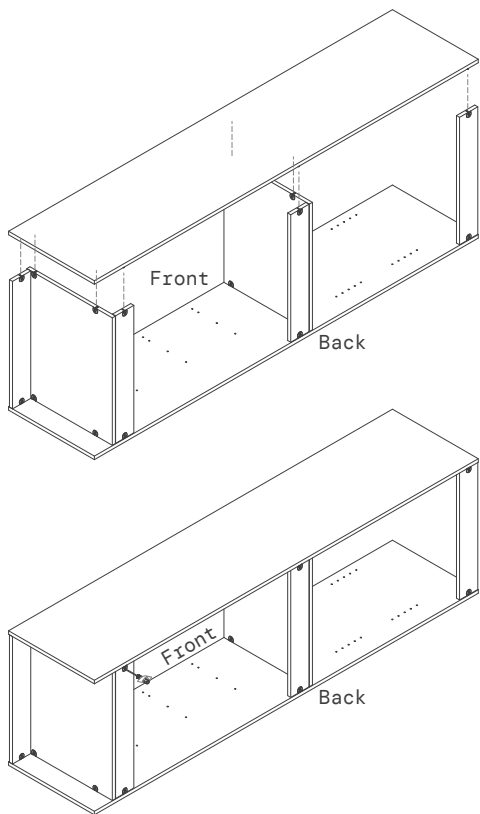


Place side on top over cam bolts and tighten cams.

## Step 5


Open Drawer, Runners box and Backs bases and fronts box

Layout all parts to assemble drawers

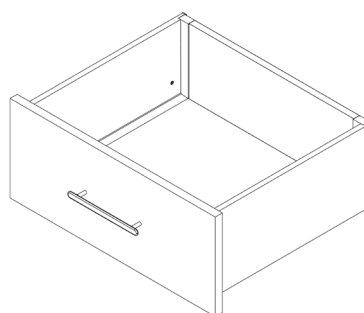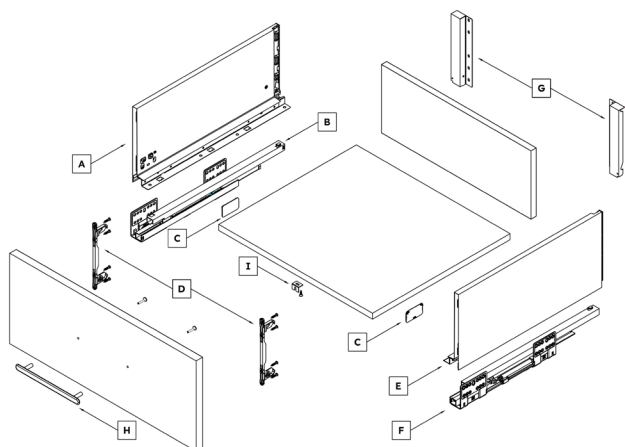

## Step 6

Fix runners L (B) & R (H) to tower sides, screwing euro screw into third hole in on Top row.

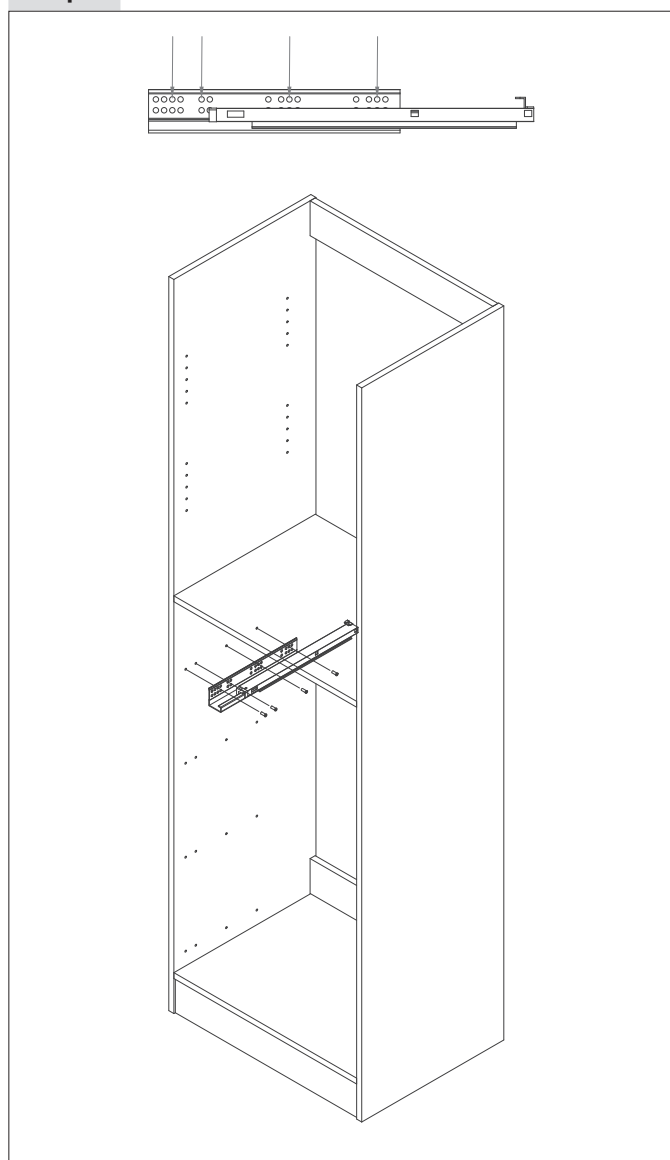


## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0


---

#### Step 7


1. Attach back bracket to timber back

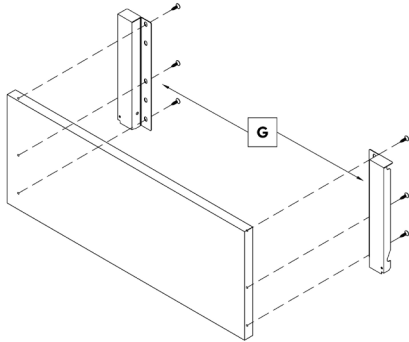

2. Slide back into draw sides and fix screws

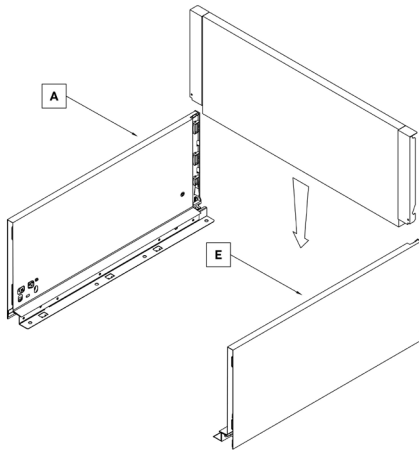


3. Slide drawer base into Runner slot

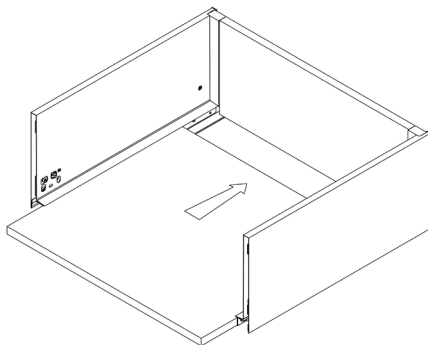





4. Turn drawer over and fix screws

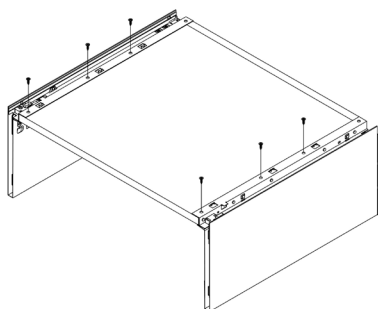


5. Tap drawer front bracket into pre-drilled holes of drawer front

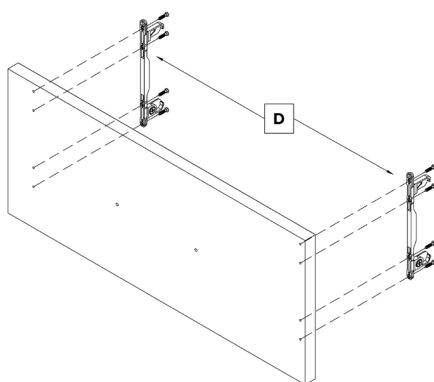

6. Line drawer front with slots in runner and push in until it clicks

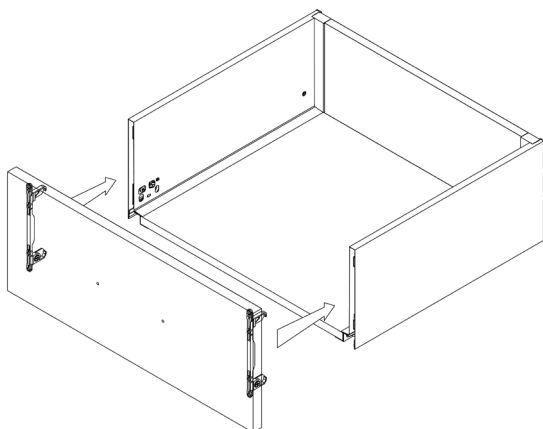

7. Slide out runners position drawer over runner and push all the way in until it clicks

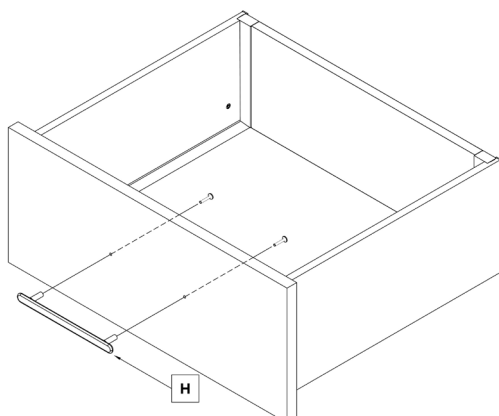

## Assembly & Installation Guidelines


### Walk-in Wardrobe — Galleria 12.0

#### Step 8


Fully extend runner. Place drawer on runner and push drawer all the way in until you hear a click. Drawer is now engaged to runner

#### Drawer Adjustment (if needed)


1. Move up down at front
2. Move laterally at front
3. Tilt drawer up and down at back
4. Fit all cover caps

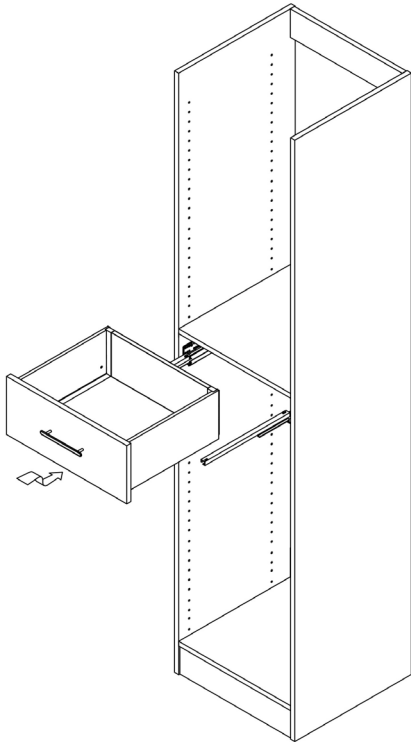


1.

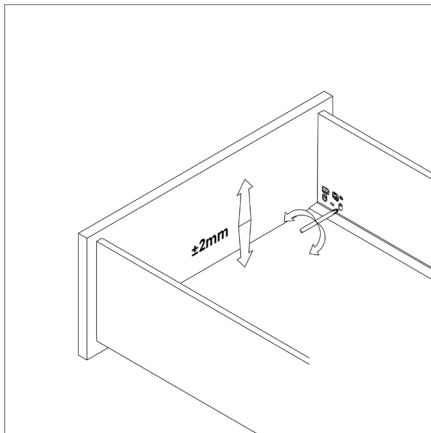




2.

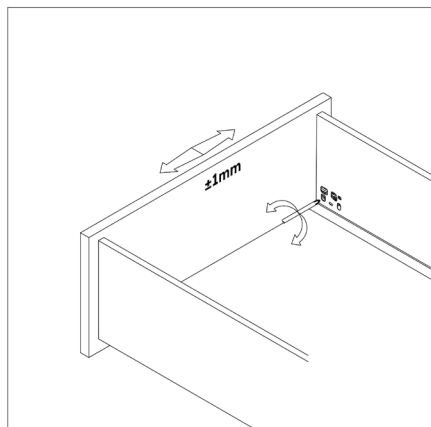


3.

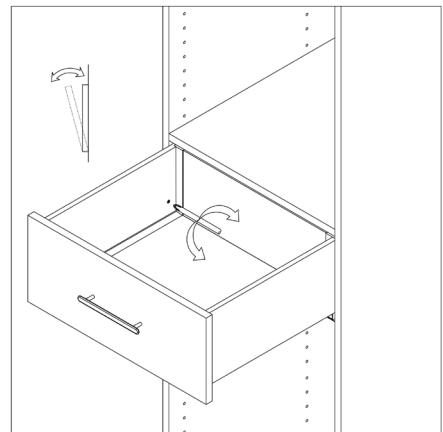

4.

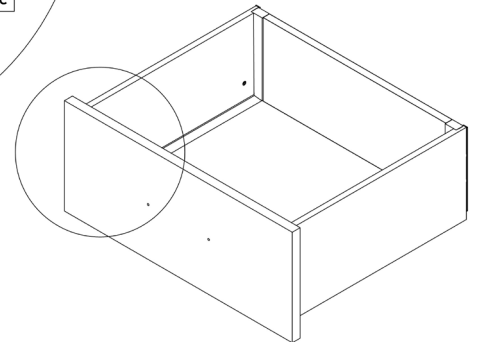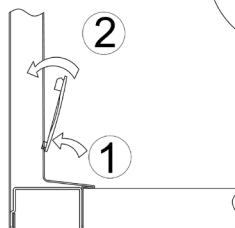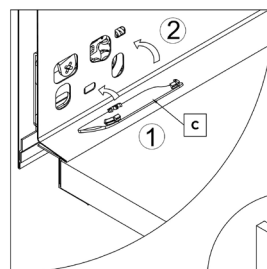


## Step 9

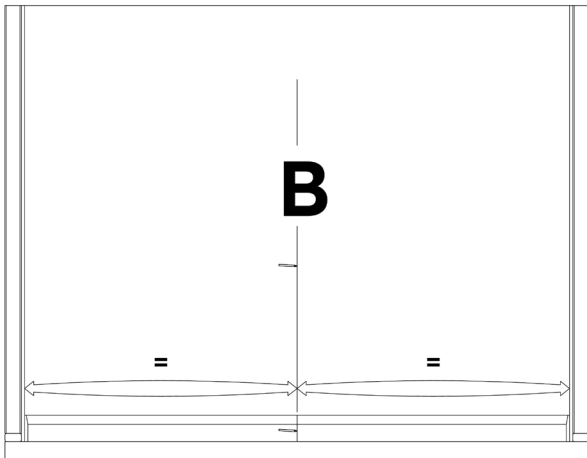


### Install Wall B Towers First

1. Measure to the centre of Wall B mark skirting with pencil

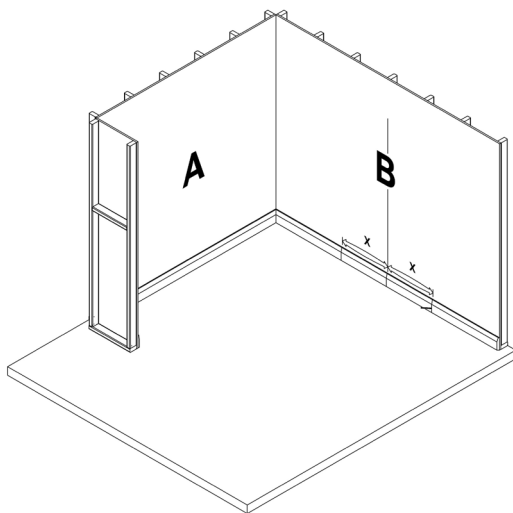

2. Measure 609mm each side of centre and mark skirting with pencil

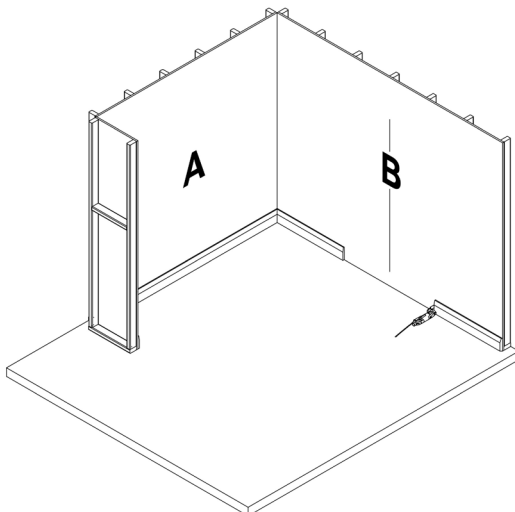


3. Use multi tool and remove skirting

## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0

---

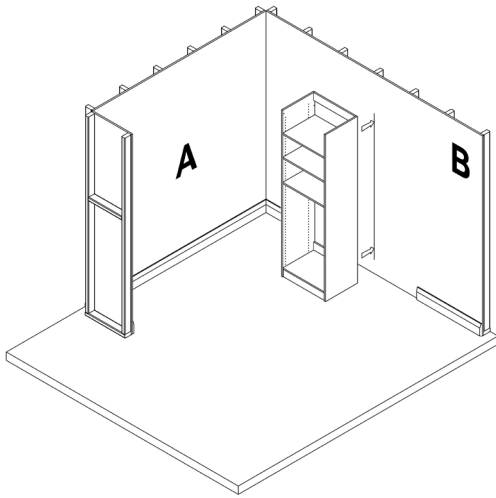

Pre-drill 2 x 3mm holes into tower Nailer.



Place towers in position. Place level on tower to ensure level and plumb.


Mark wall with pencil

Fix 40mm screw into stud - If stud is not present, then fix with screw and plug (Wall Mate).

Tip: use packers to level tower.


Tip: pre-drill and countersink board.

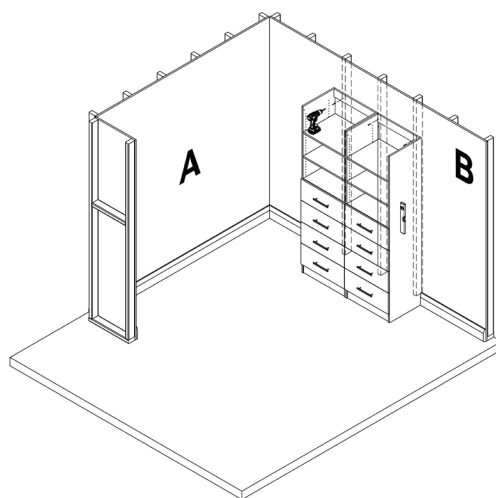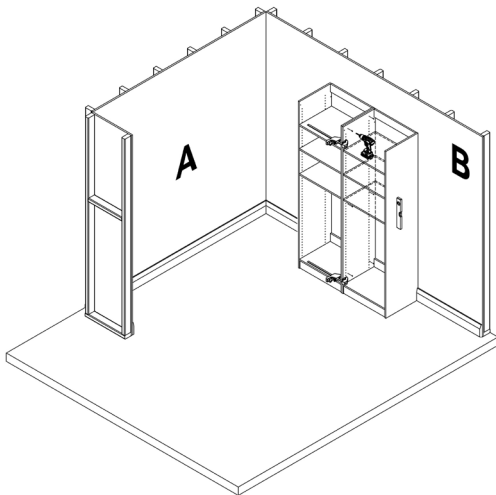

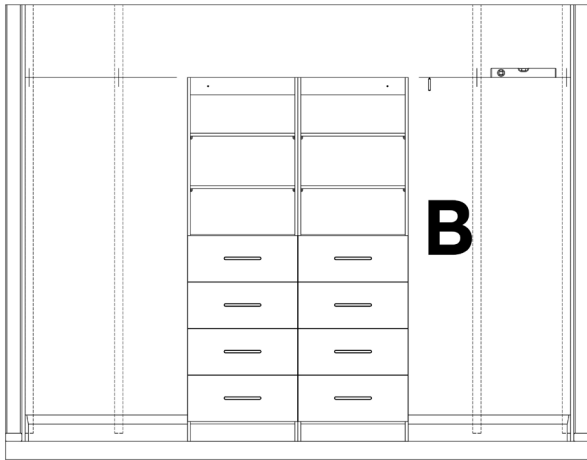**Step 10**

Use spirit level to mark horizontal line from top of towers across full width of Wall B A & C .

Locate wall studs with stud finder and mark wall above pencil line (no greater than 16mm).

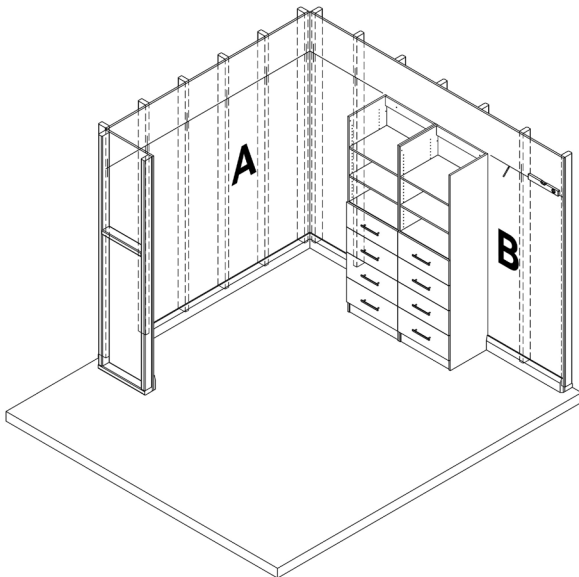


## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0


---

#### Step 11

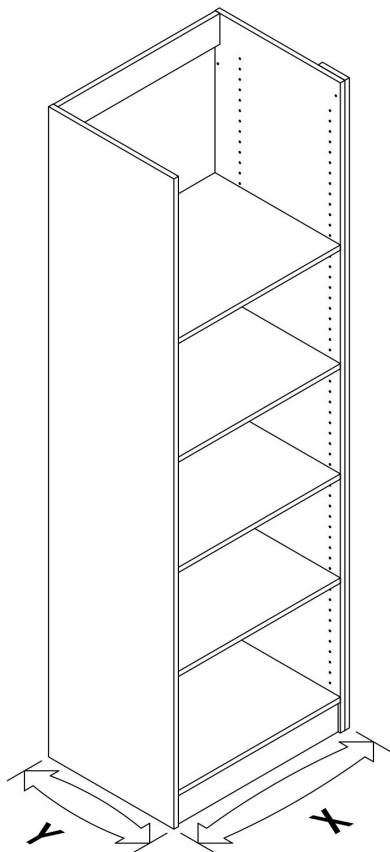

#### Install Wall A & C towers

1. Measure the width and depth of tower and mark skirting with pencil (be sure to include the infill if infill required).

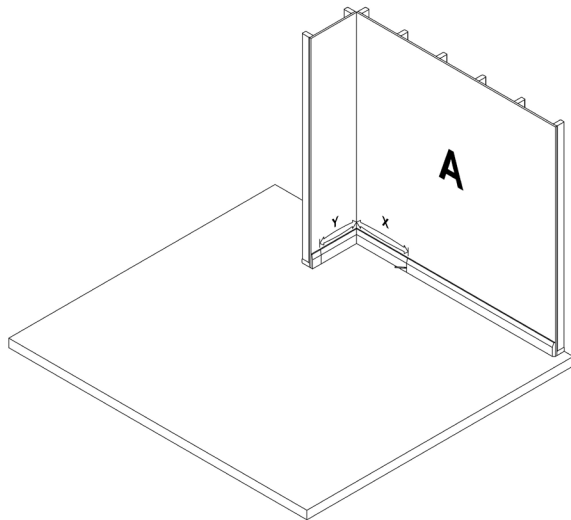

2. Once skirting has been marked on walls A and C, use multi tool to cut and remove skirting where tower is to be installed.

Check wall for plumb, place level on wall.



If wall is greater than 3mm out of plumb scribe infill.

Tip: refer to our guide “how to scribe” infill.

All our guides are located in our online DIY help centre [www.stegbar.com.au/support](http://www.stegbar.com.au/support)

If required, using the 6x 28 6 gauge screws, screw 16mm infill to wall side of shelf unit .

Screw infill to side of tower if required from front or back.

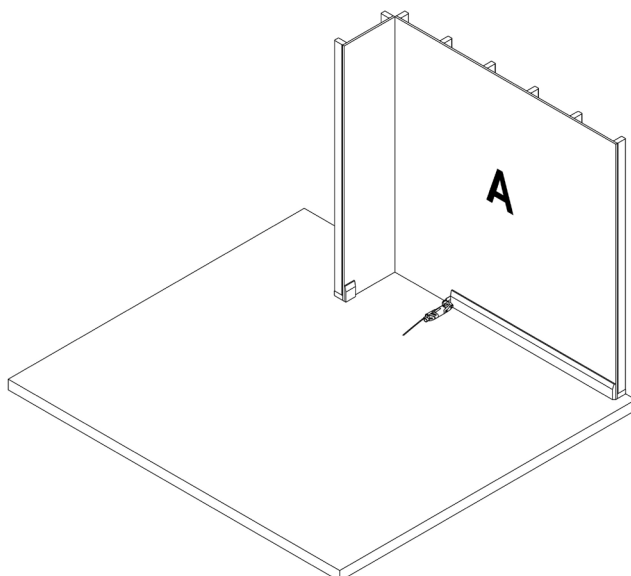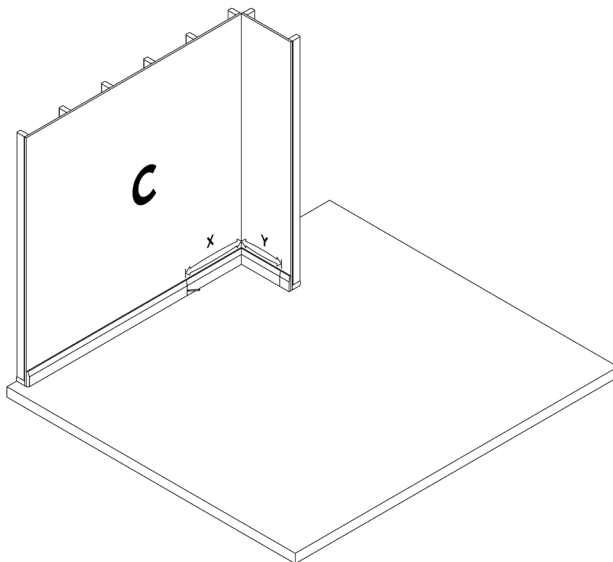


## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0

---

#### Step 12

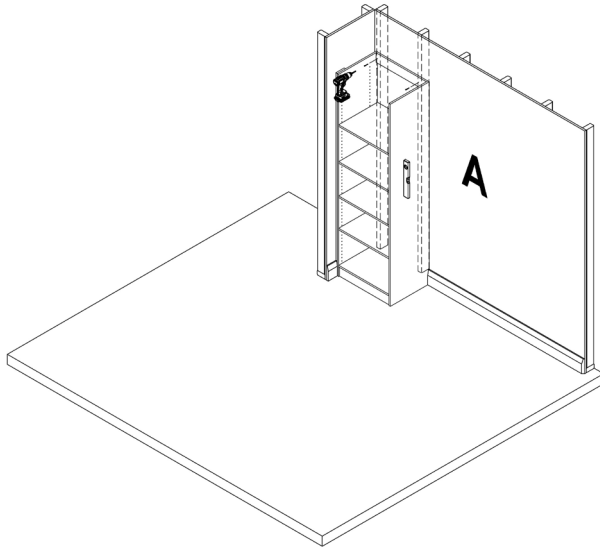

Pre-drill 2 x 3mm holes into tower Nailer.

Place tower in position.


Pack tower to pencil line if required

Place level on tower to ensure level and plumb.

Fix 40mm screw into stud - If stud is not present, then fix with screw and plug (Wall Mate).


Tip: use packers to level tower.

Tip: pre-drill and countersink board.

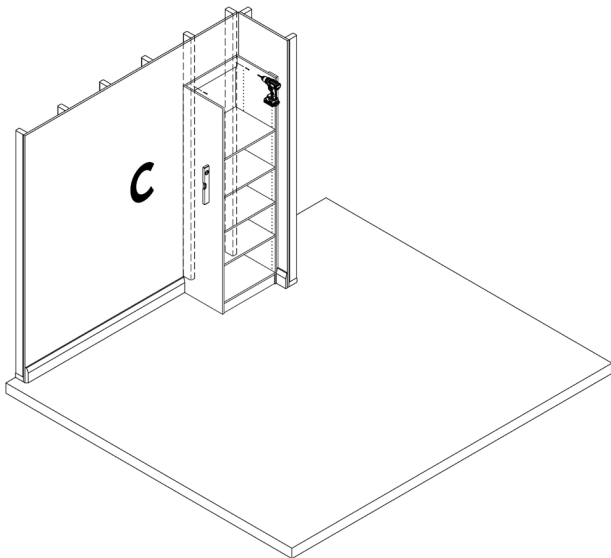





## Step 13

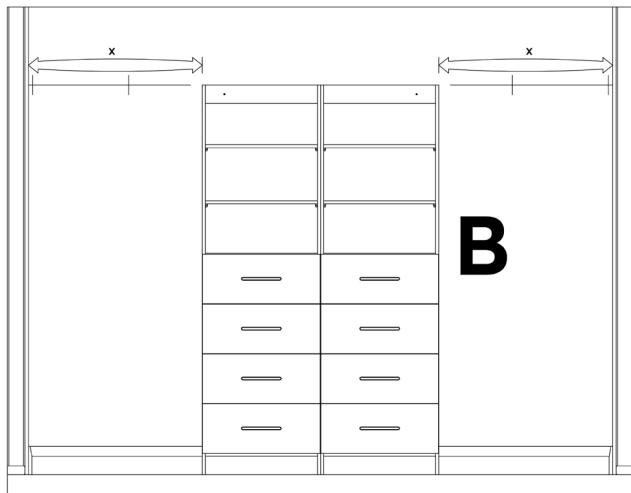

1. Measure from towers to Wall A & C

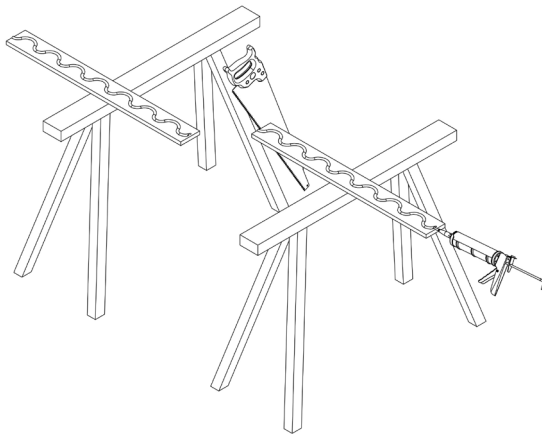

2. Cut back wall cleats to size, apply liquid nails to back of cleat in radio wave pattern

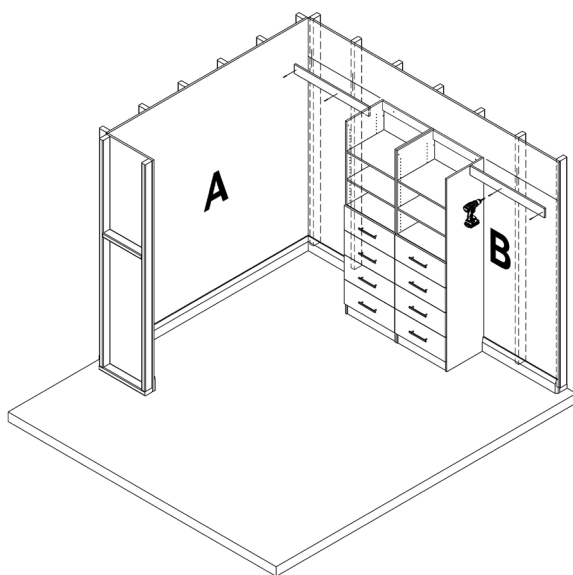



3. screw cleat to wall into stud.

Tip: pre-drill board and countersink.

## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0


#### Step 14

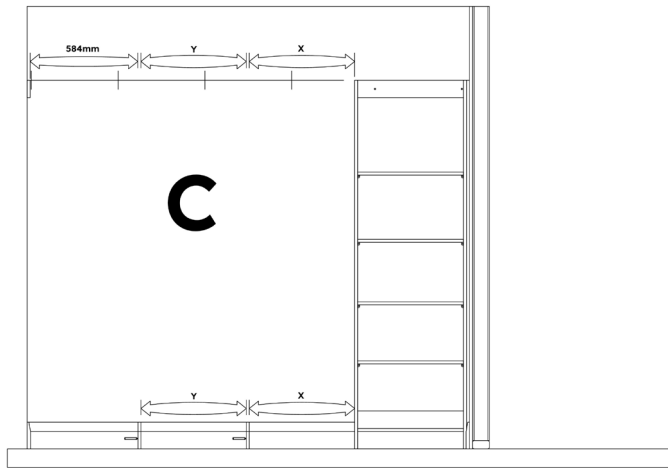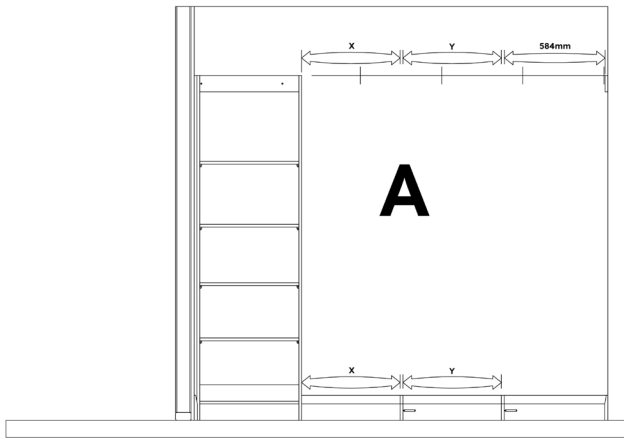


#### Wall A & C Install


1. Measure 584mm from Wall B back cleat mark skirt
2. Mark centre divider (W3000mm only)

3. Cut wall cleats to size, apply liquid nails to back of cleat in radio wave pattern
4. screw cleat to wall into stud.

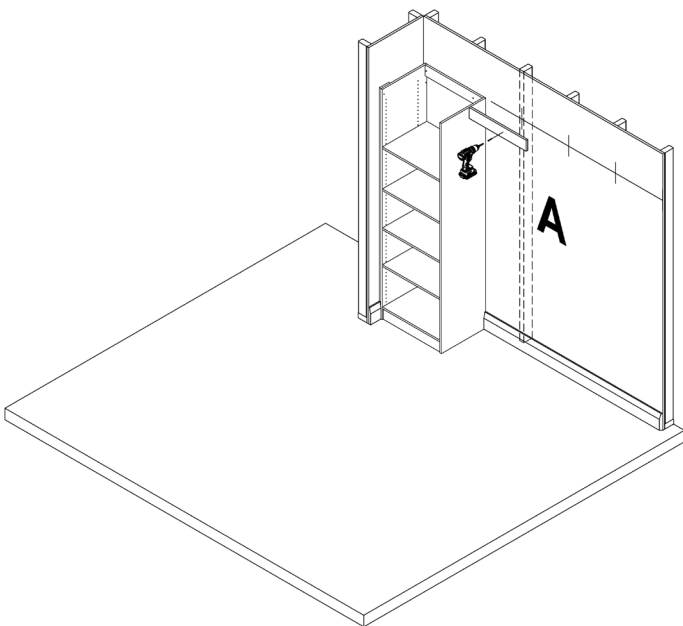

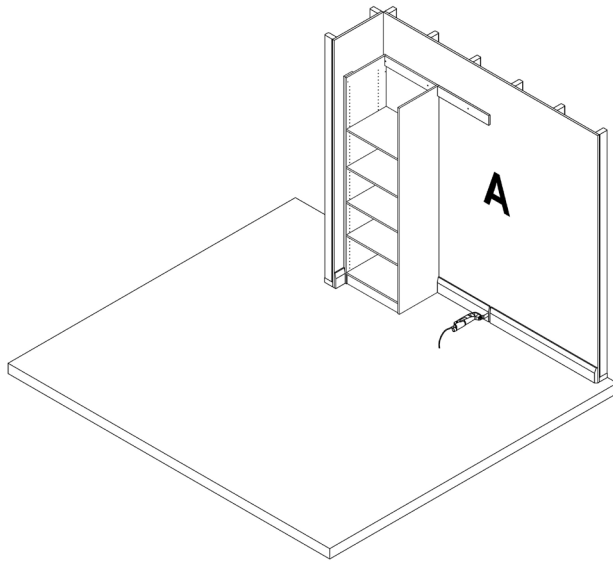


5. Use multi tool and remove skirting

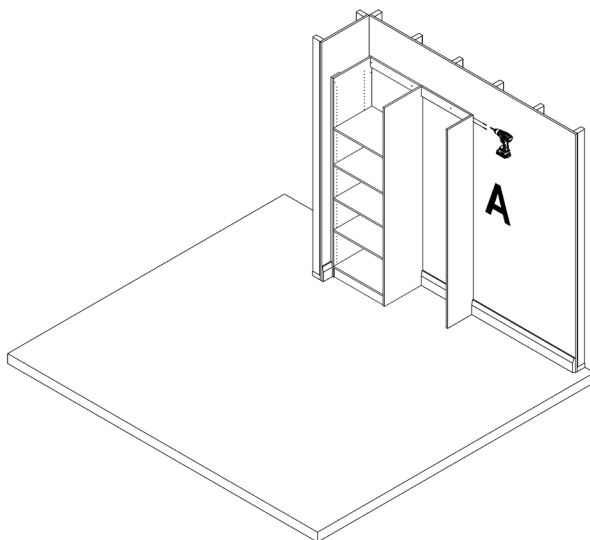

6. Place divider into position

if divider has a gap against wall greater than 3mm, scribe divider into wall




7. Screw divider to wall cleat

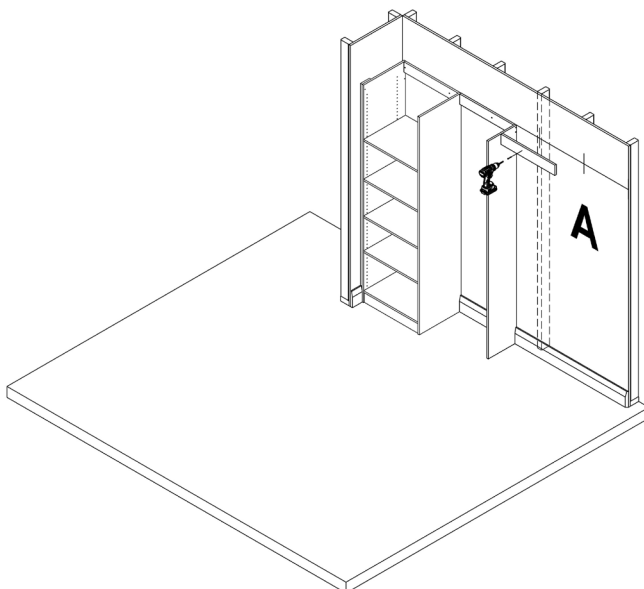

## Assembly & Installation Guidelines


### Walk-in Wardrobe — Galleria 12.0

---

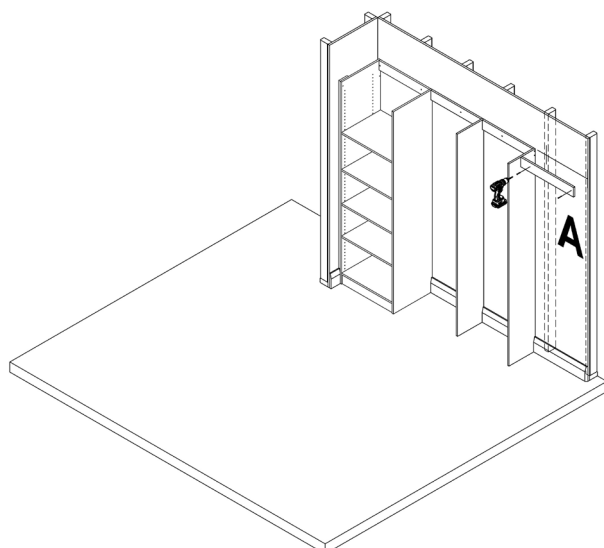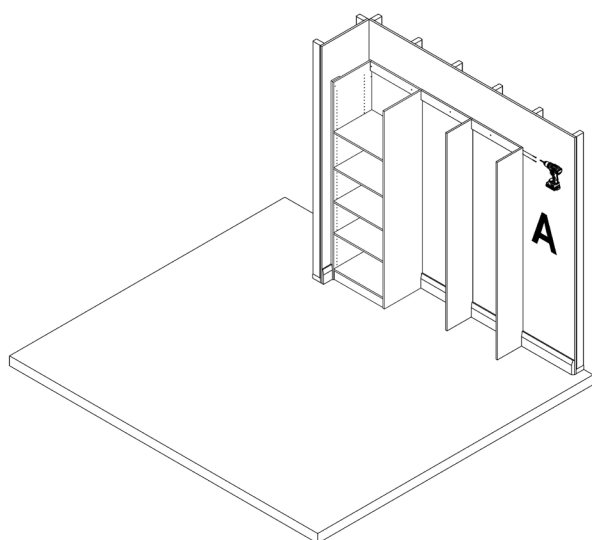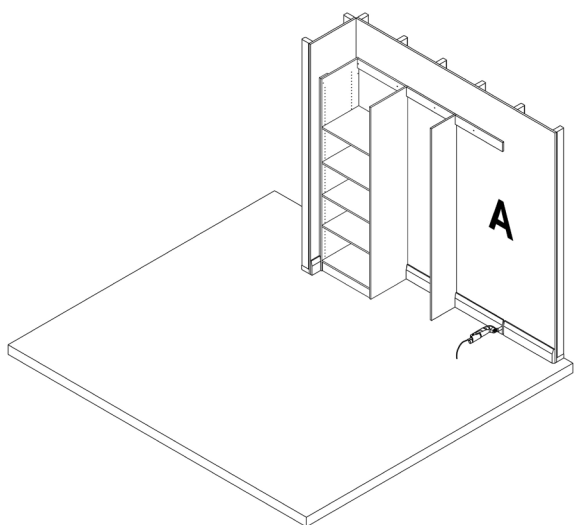

8.Repeat steps to complete Wall A & C

## Step 15

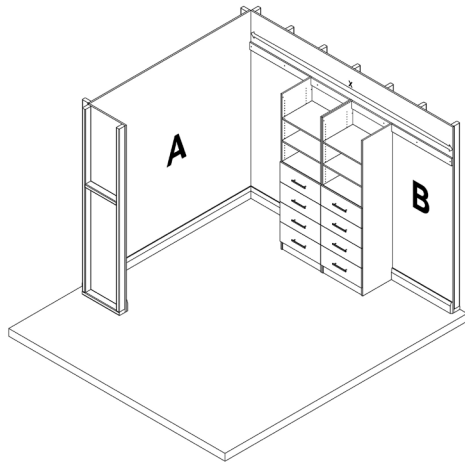




1. Measure Wall B top shelf width ensuring you check the walls are square using a square edge.

2. Cut top shelf to correct size allowing for wall run outs.

Place top shelf into position.

3. Screw top shelf down into wall cleats and divider using 40mm screws.


Tip: pre-drill board and countersink.

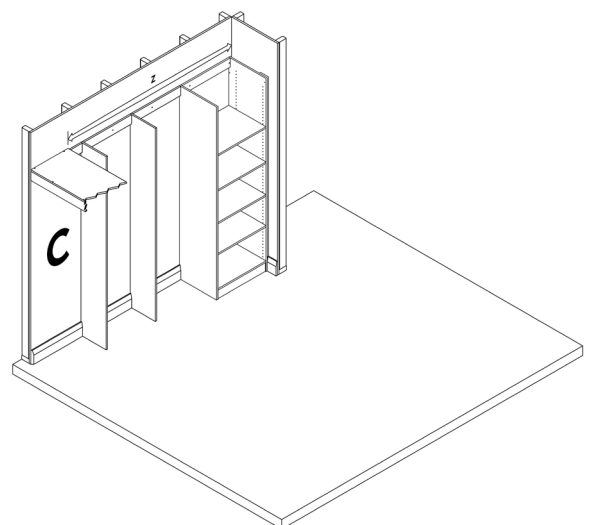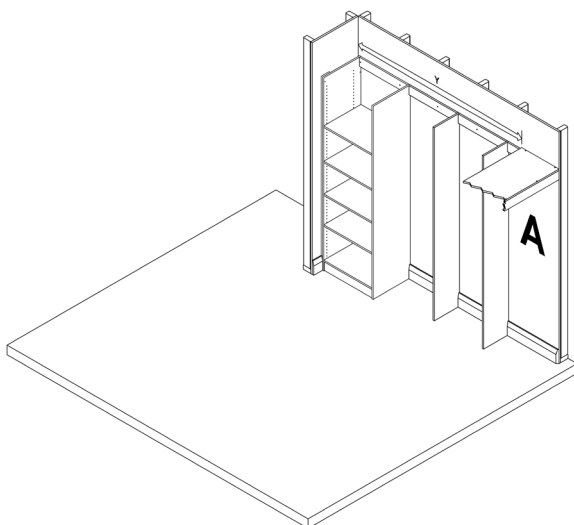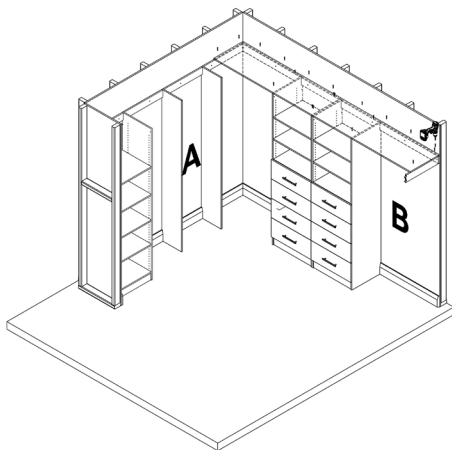

## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0

#### Step 16

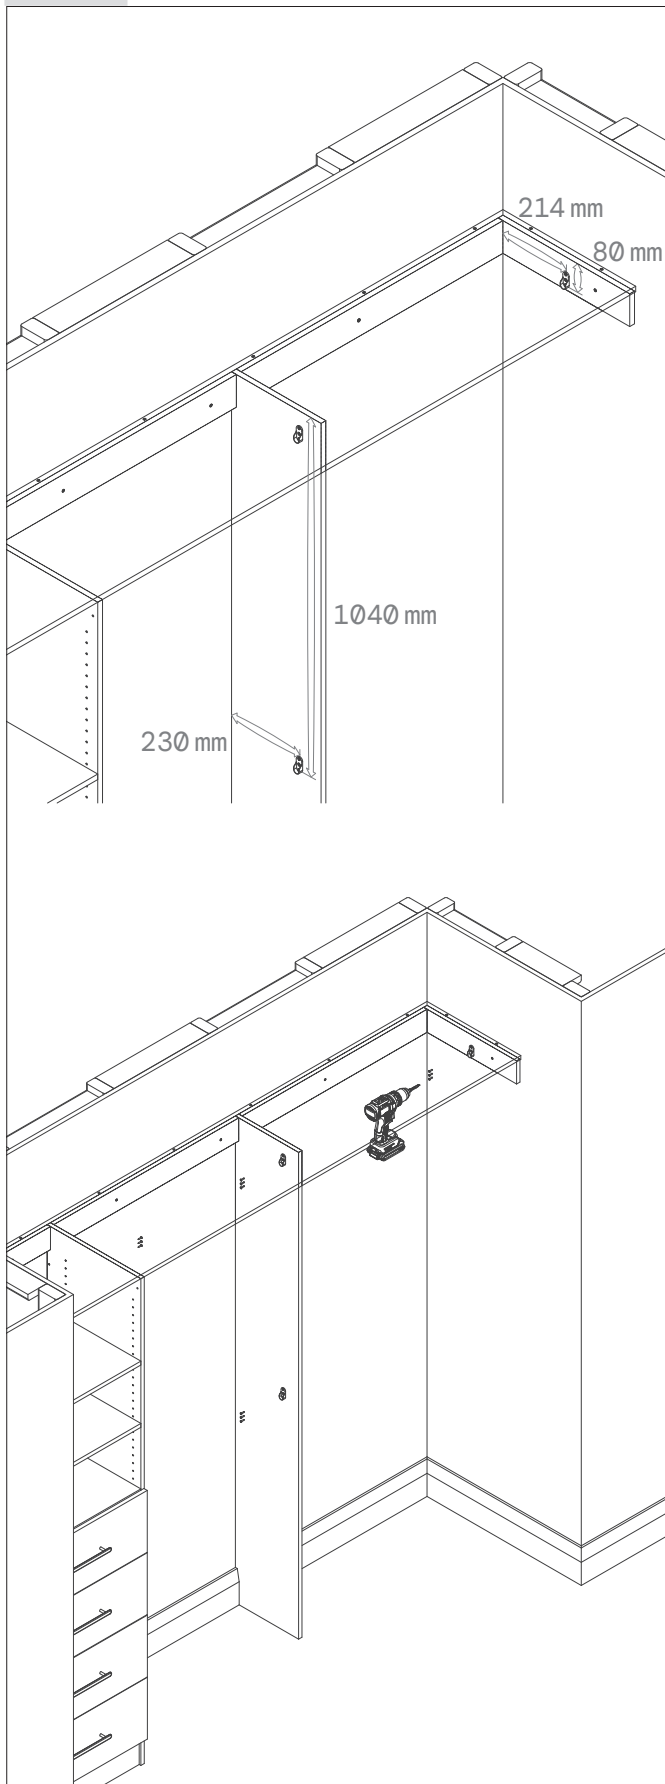

1. Measure 214mm off cleat on back wall and 80mm down from side cleat.


This measurement is to the bottom hole of hanging rod end.

2. Fix hang rail ends using 16mm screws.

Tower side Double hang rail – measure 214mm off back cleat & 1040 down from top shelf.

Divider Double hang rail – measure 230mm off back wall & 1040 down from top shelf.

## Step 17

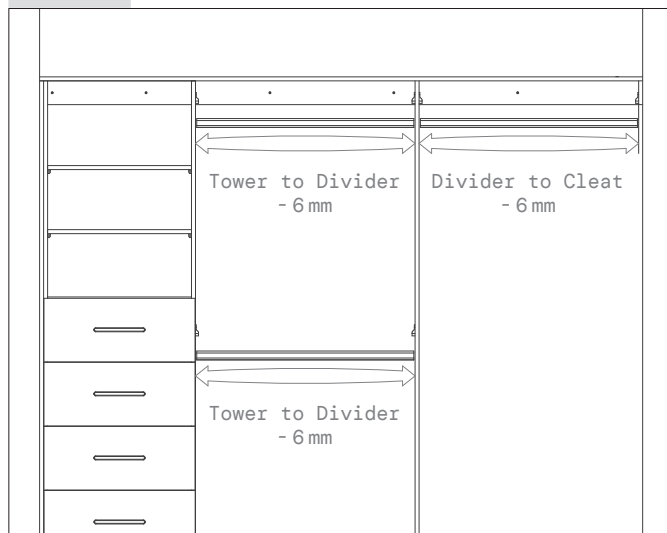


Measure distance between board (tower to divider) (divider to side cleat) deduct 6mm off overall width.

Cut hang rail to size and insert into hanging rail end ends.


Tip: face top hang rail with groove up – if double hang face down.

## Step 18

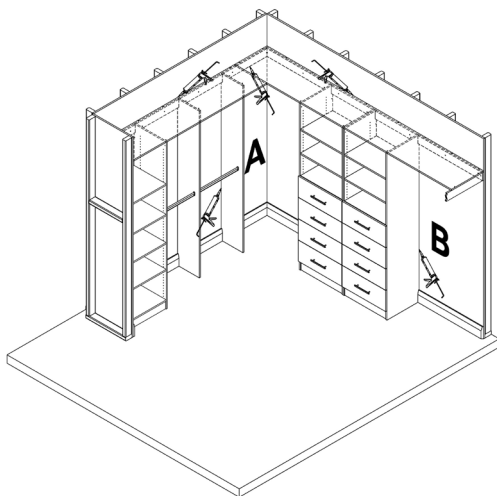

Using caulking, Gap all connections between board and wall or board and board.


Note: only gap top shelf if under 1800mm high.

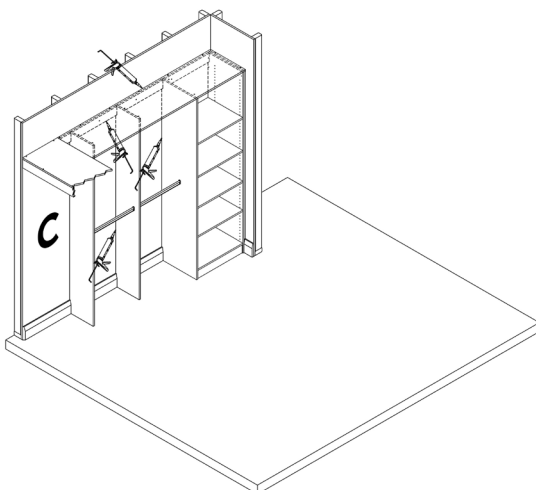

## Assembly & Installation Guidelines

### Walk-in Wardrobe — Galleria 12.0


#### Step 19

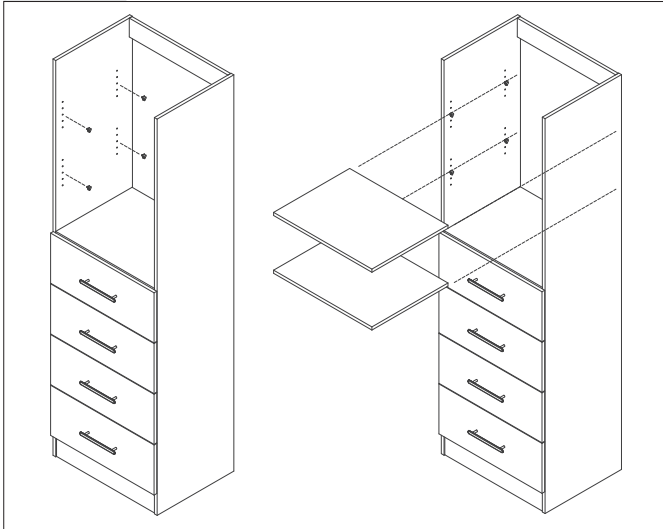

Open adjustable shelves box.

Fit shelf brackets in and place shelves at desired height after tower has been positioned and fixed to the wall.

#### Step 20

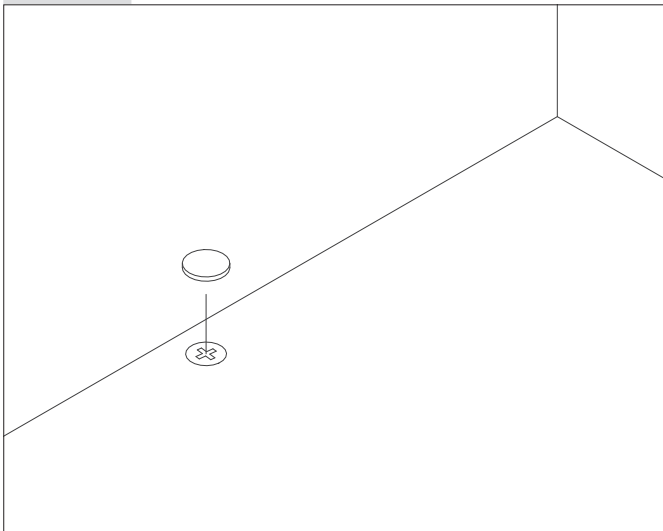

Fast cap (white dot) all screws.

Clean shelving with damp cloth and remove stickers.







Stegbar is not providing any installation of the product, which is your responsibility. The information in this assembly document is of a general nature only and is provided regarding a typical installation process. Accordingly, this assembly document does not take into account your specific circumstances, environment, needs, tools or skills.

You should not rely solely on the general information in this assembly document for installation. There are risks associated with installation and you assume those risks voluntarily by installing this product. To the extent permitted by law, Stegbar does not accept responsibility and is not liable for any loss, damage or injury suffered by you as a result of any circumstances specific to you that are not addressed in these assembly documents.

You should independently consider whether the services of any third party are appropriate for you. Any service supplied by a third party is subject to the terms and conditions of that third party. Stegbar is not responsible for any agreements, maintenance, delivery or satisfaction of any transactions undertaken with a third-party provider. To the extent permitted by law, Stegbar is not responsible is and is not liable for any loss, damage or injury suffered by you as a result of the conduct of the third party.

Stegbar reserves the right to alter or amend without prior notice general information and design details specified in these assembly documents.  
JWSNAT0574/0423 | [stegbar.com.au](http://stegbar.com.au) | Version 1.0 | October 2023